

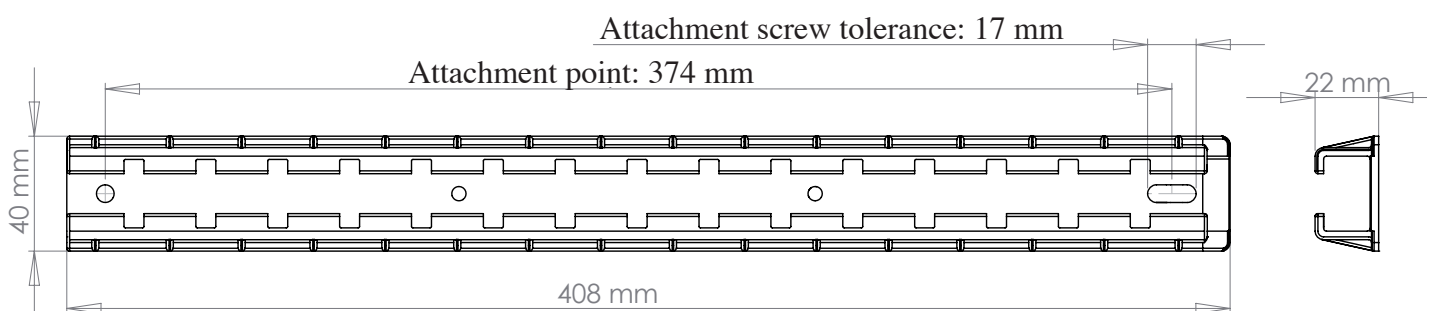


The Kajak-Sport footrest system is one of the most innovative footrests available in the world. With the KS-footrest you always have solid support for your feet which is the basic rule for efficient paddling. **The footrest consist of a solid rail and an innovative pedal part with self pivoting system for adjusting** and soft grip material in the middle of the pedal.


**The adjusting of the footrest is smart and simple. It can be done only with feet. The position of the pedals can be adjusted while seated.**

The Footrest can be fixed to the kayak simply with screws through the hull or by laminating into the kayak hull with special KS-fasteners (#501117) for footrest.

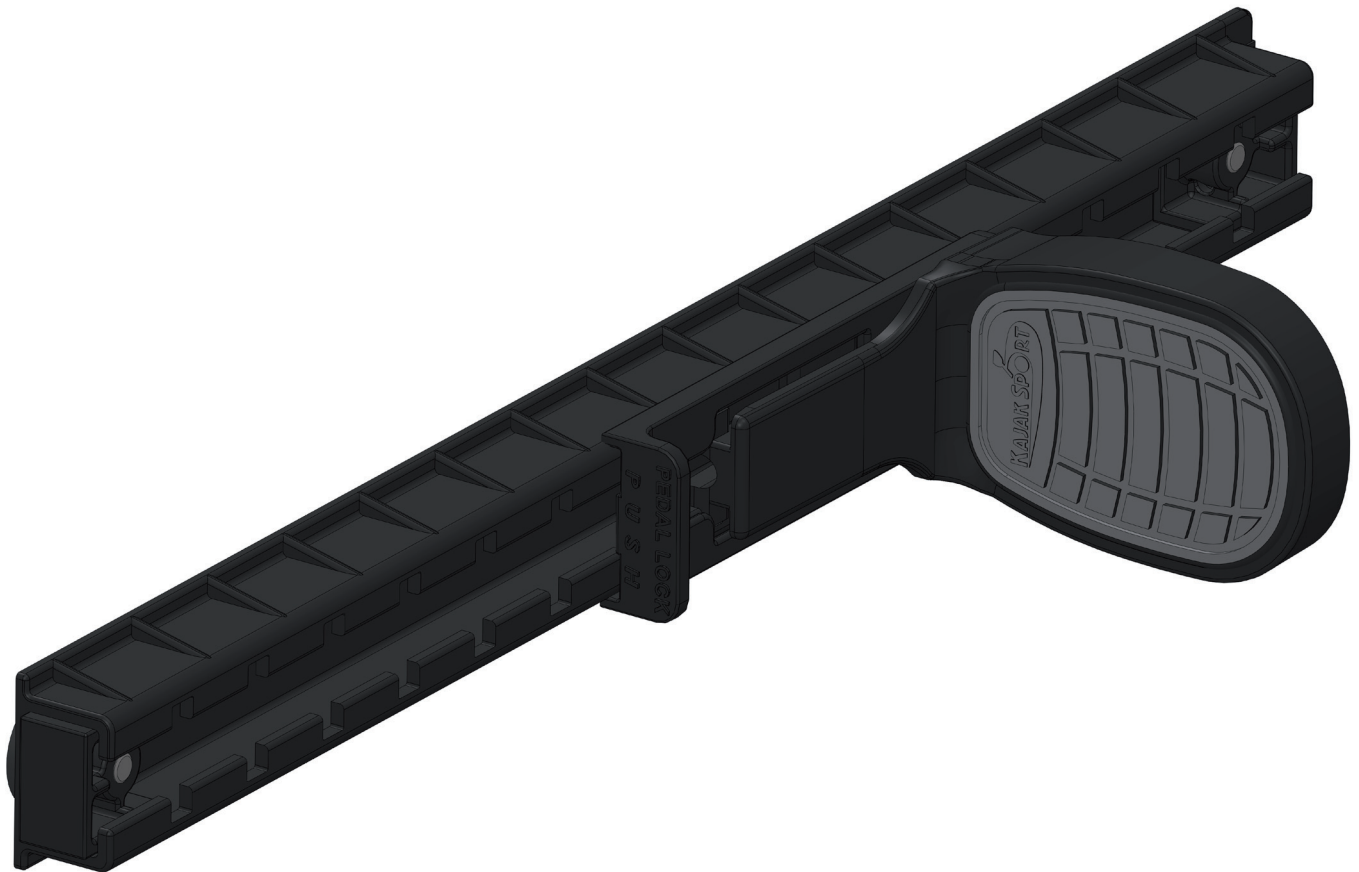

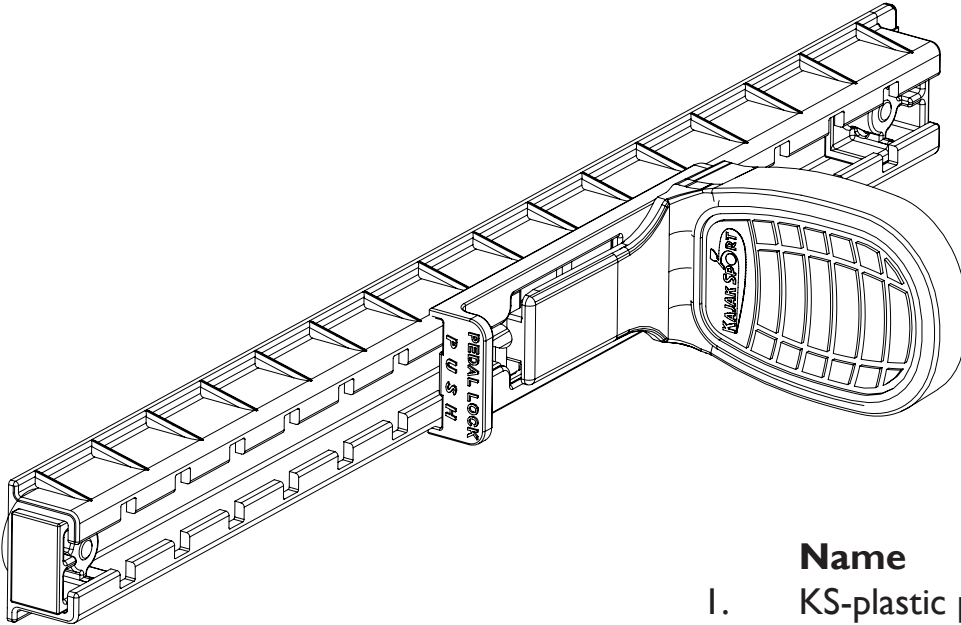


	Name	Code	Qty
1.	KS-plastic pedal	501111	2
2.	KS-rail	501112	2
3.	KS-pedal lock	501114	2
4.	KS-rail end	501113	4
5.	Foam washer	501116	4
6.	PT-torx screw	475622	4

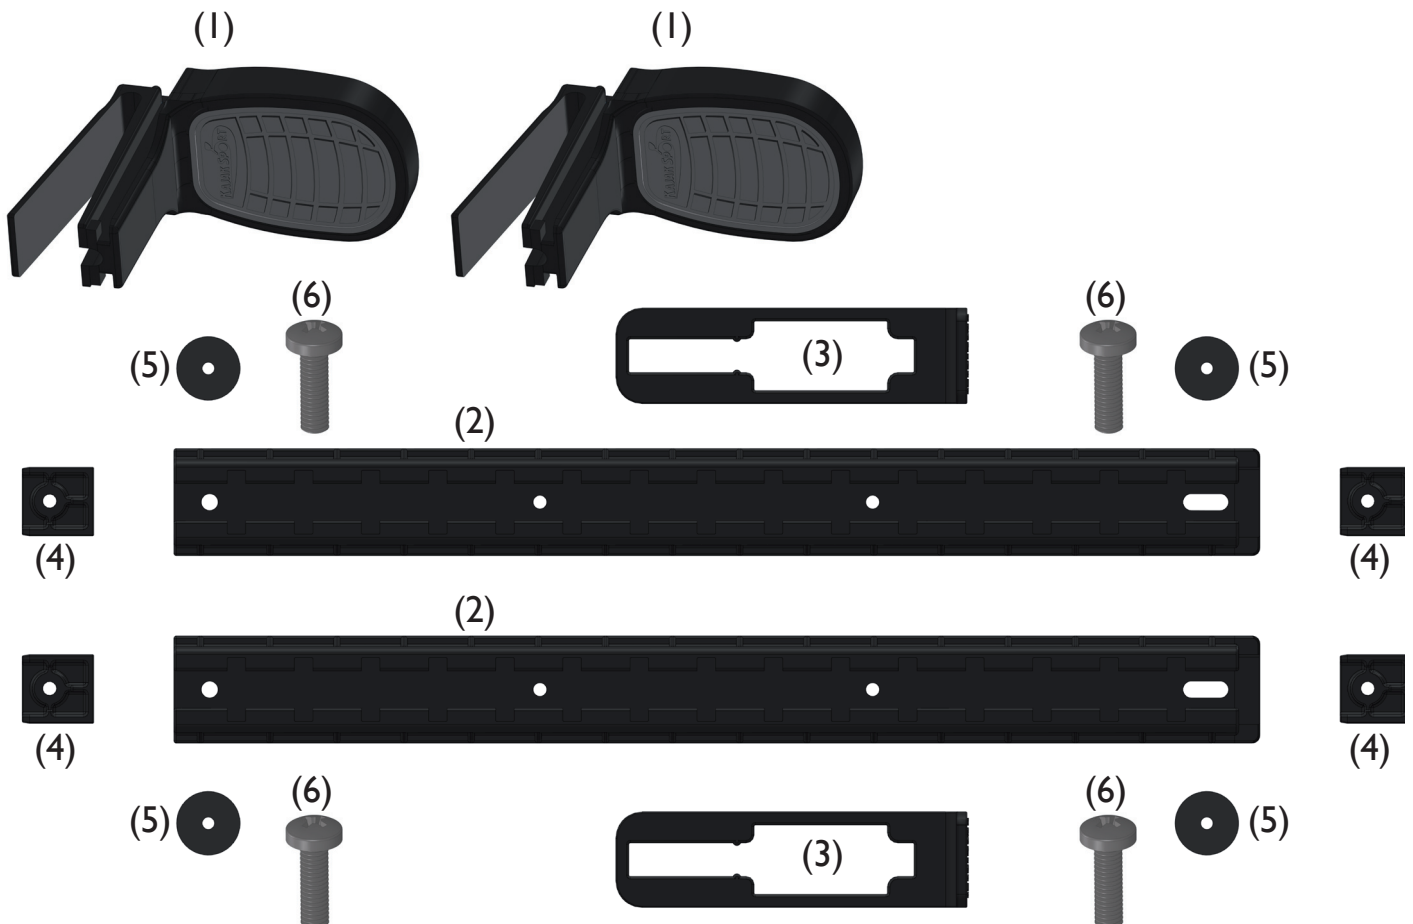


## Assembling the pedal lock to the footrest pedal

- A) Slide the hinge mechanism plate of the pedal inside the pedal lock part. Push it as far as the pedal lock front end can turn up in the track on the pedal.
- B) Pull the pedal lock backwards, so that the front end of the pedal lock will stay in the track
- C) Lift the pedal lock rear end to equal level with the front end. Now try that the pedal lock can freely slide front and back on the pedal track.

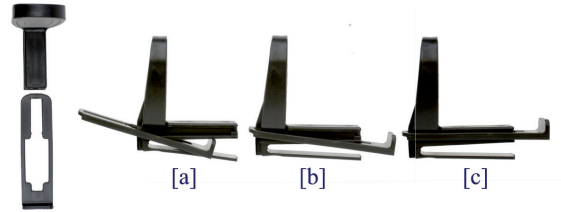

## Assembling the footrest:

- 1) Slide the pedal to the rail. Consider the rail front end to be the one with oval shaped attachment hole.
- 2) Place the foam washers around the attachment holes at the back side of the rail in both ends.
- 3) Slide the rail end parts to the both ends of the rail.
- 4) Fasten the footrest by screwing it through the kayak hull from the outside. Notice that screws are not ment to attach the rail itself, but they fasten to the rail end parts which will tighten the complete footrest package properly against the kayak hull.

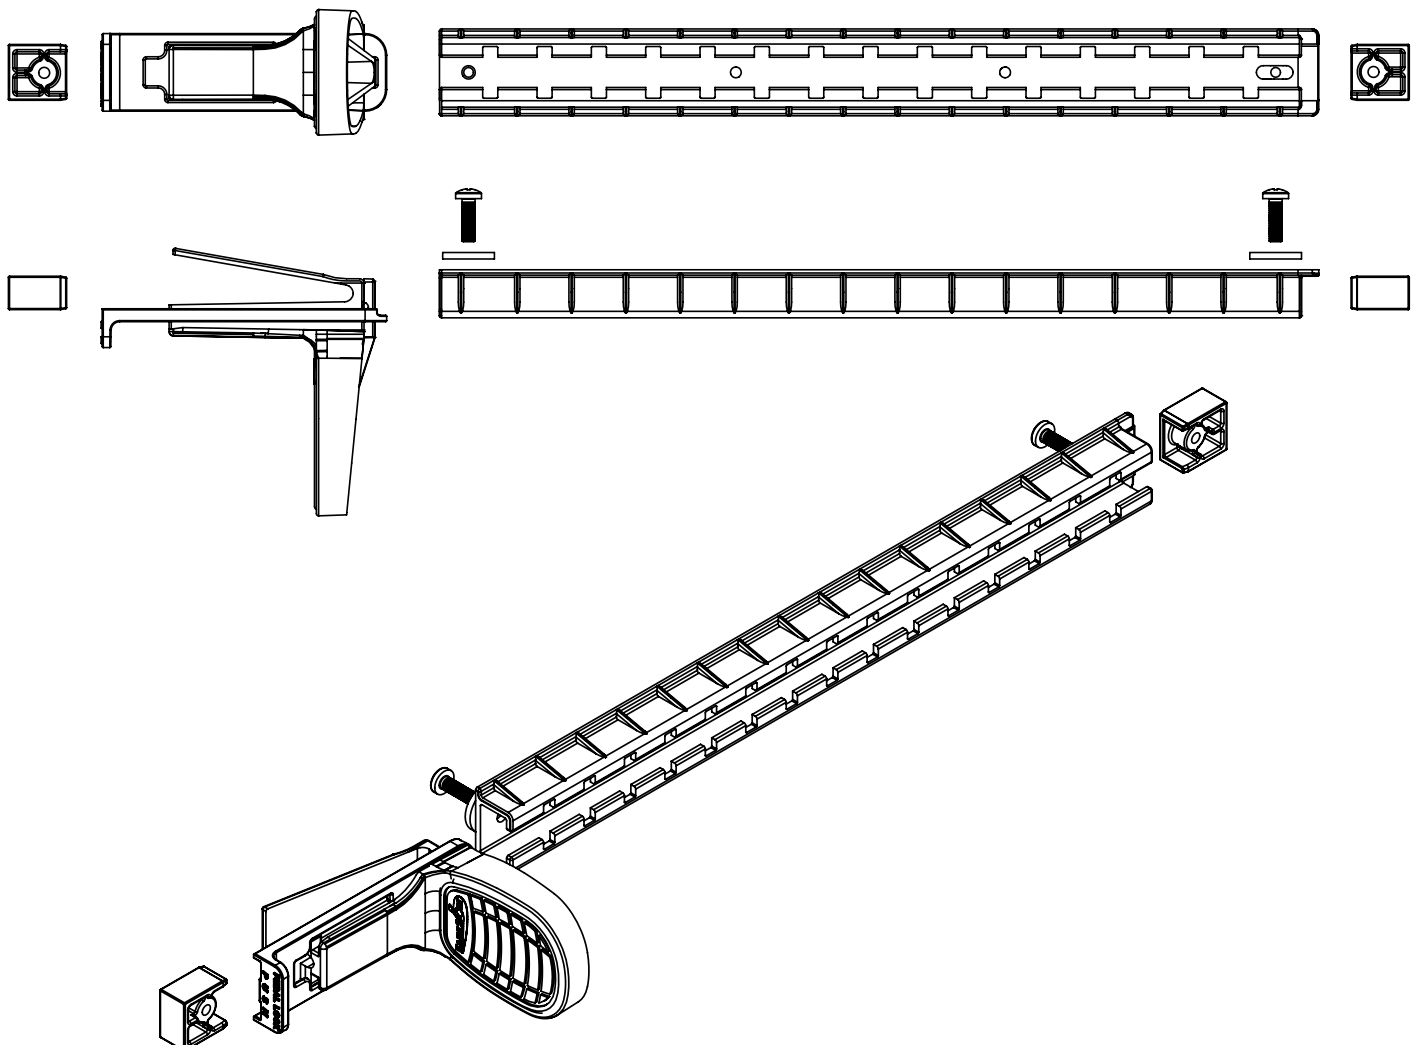

**Adjusting the pedal distance**

Forwards:



- 1) Open the pedal lock by pulling it before adjusting the pedal.
- 2) Press the pedal arm against the rail and keep it pressed while adjusting the pedal distance.
- 3) When pedal is in correct position stop pressing the pedal arm against the rail and push the pedal a bit further until it locks to the next free slot.
- 4) Press the pedal lock part between pedal and rail to lock the system.

Backwards:


- 5) Open the pedal lock by pulling it before adjusting the pedal.
- 6) Place your foot behind the pedal and pull it closer. The pedal will move freely
- 7) When pedal is in correct position change your foot in front of the pedal and press it slightly forward until the pedal locks to the next free slot.
- 8) Press the pedal lock part between pedal and rail to lock the system.

**Unlock the pedal before adjusting**

**Lock the pedal after adjusting**

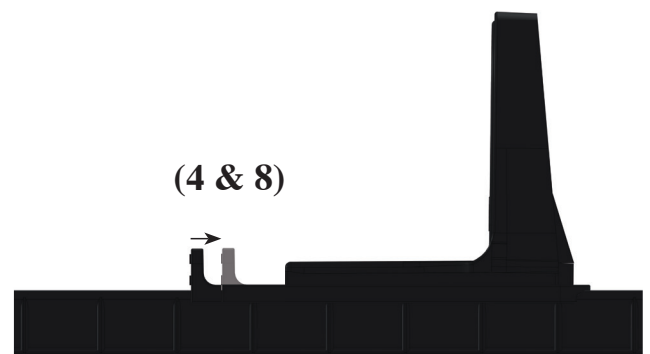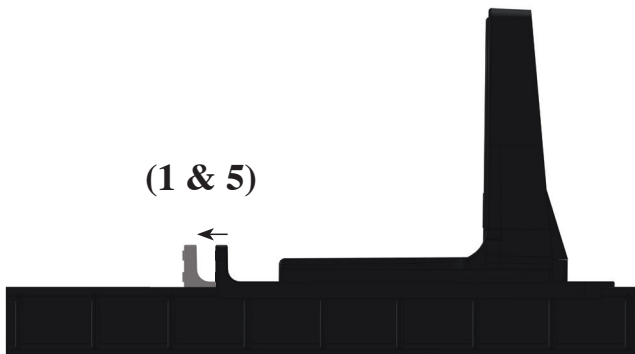

**Move pedal forwards**

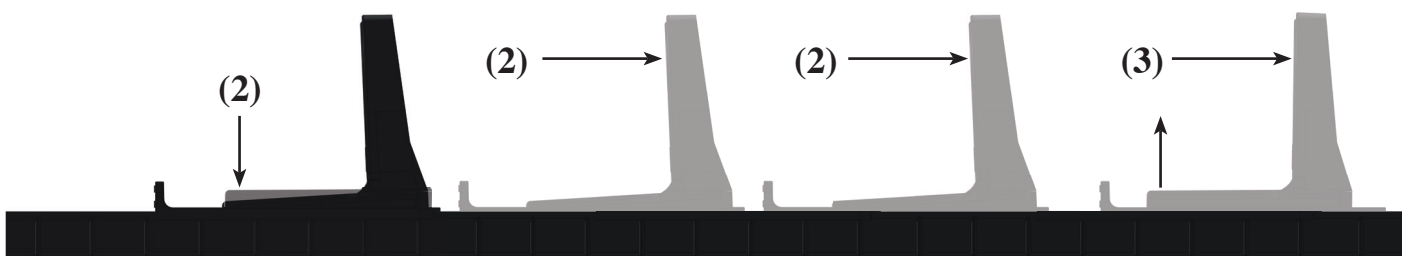

**Move pedal backwards**

